

## Sound and light indications RF Locks

Serial No.	Door lock operation	Lamp indication	Sound indication	Lock response	Result of the operation	Solving method
1	Initialization	The green lamp glows	It beeps thrice	Non	Restore factory settings	
2	Password Card	The green lamp glows	It beeps once	Non	Set the system password etc to the door lock	
3	Locking card No.	The green lamp glows	It beeps once	Non	Set the No. etc to the door lock	
4	Time card	The green lamp glows	"Beeps" once	Non	Set the door lock time and work time section into the door lock	
5	Reset card	The green lamp glows	"Beeps" once	Non	Reset the guest information in the door lock	
6	Room locking card	The green lamp glows	"Beeps" once	Non	After the room is locked by a locking card, it cannot be opened by any card except an emergency card.	
7	Room locking card	The red lamp flashes	It beeps twice	Non	Clear the room locking ID and cancel the room locking	
8	Check-out card	The green lamp glows	"Beeps" once	Non	Terminate the current guest, who can open the door	
9	Open the door with a mechanical key	The green lamp glows	"Beeps" once	Unlock failure	An unlocking record is left	
10	Open the door with a legal card	The green lamp glows	"Beeps" once	Open the door	The door is opened and an unlocking record is left	
11	Close the door with a legal card	The red lamp glows	It beeps twice	Close the door	The door is closed	
12	Enter/Exit Enabling mode:	Non	It beeps once (long)	Non	After the door is opened, scan the staff card with enabling function again during enabling, it indicated to enter the enabling mode. Scan the card again and exit	
13	Enable the temporary card	Green lamp flash	It beeps once	Non	Enable the temporary card successfully under the enabling mode	
14	Disable the temporary card	The red lamp flashes	It beeps twice	Non	Disable the temporary card successfully under the disabling mode	
15	The temporary card is full	Non	It beeps thrice	Non	The temporary card is full if you enable it under the enabling mode	
16	Inclined dead bolt alarm	The red lamp glows	I beeps thrice	Non	Locking failure	Inclined dead bolt alarm
17	Unlock under-	The green	It beeps 8	Open the	Battery voltage is low	Change

	voltage alarm	lamp glows	times	door		the battery
18	Handset password setting	The green lamp glows	"Beeps" once	Non	Write the new password into the door lock	
19	Setting lock allocation data with the handset	The green lamp glows	"Beeps" once	Non	Set the allocated data to the door lock	
20	Read door lock time with the handset	The green lamp glows	"Beeps" once	Non	Read door lock time	
21	Set door lock time with the handset	The green lamp glows	"Beeps" once	Non	Set door lock time	
22	Query power status by the handset	The green lamp glows	"Beeps" once	Non	Query door lock power status	Replace the battery is under voltage is displayed
23	Summarize door lock information with the handset:	The green lamp glows	"Beeps" once	Non	Summarize door lock information	
24	Non system card	The red lamp glows	Non	Unlock failure	Password error or card type error	Reissue the card
25	Ineffective card	The green lamp flashes and then the red lamp flashes	Non	Unlock failure	Verification error	Reissue the card
26	Mechanical double-lock	The yellow lamp glows	Non	Unlock failure	Except guest cards, other unlocking cards can be set to open or not open the door.	
27	Time error indication	The red lamp glows	It beeps once	Unlock failure	There are 2 causes: 1. Ineffective guest card or staff card is scanned; 2. card operation error.	
28	Lock No. error indication	The red lamp flashes	It beeps twice	Unlock failure	There are three causes: 1. Ineffective guest card or staff card is scanned; 2. card operation error.	
29	Illegal card indication:	The red lamp flashes	It beeps thrice (long)	Unlock failure	Data error	Reissue the card
30	Check-out indication	Green lamp flash	It beeps once	Unlock failure	As the checkout card has disabled the current guest card, this signal appears if the current guest card scanned.	Issue a guest card
31	Old guest card indication	The yellow flash	It beeps once	Unlock failure	Scan the old guest card of the room ever stayed	Issue a guest card
32	Room locking indication	The yellow flash	It beeps twice	Unlock failure	Indicating that the room is locked by a locking card	Scan the locking

					and cannot be opened by any card except an emergency card.	card again to cancel the locking mode
33	Loss report indication	The yellow lamp glows	It beeps thrice (long)	Unlock failure	A lost unlocking card that has been disabled is scanned	Cancel the loss report
35	Self-check of electrification	Press the key, it "beeps" long , it "beeps" short, the green lamp glows, it "beeps" short, the red lamp glows, , it "beeps" short, the yellow lamp glows, the motor rotates clockwise, the motor rotates counterclockwise				